

Side Seal Adapter


- Allows conventional top seal elbows to be used with side seal style fill collars
- Bottom connects to side seal collar/top section accepts standard 4" top seal elbows



Part #	Description
6000-SSA	Side seal adapter

Anti-Spill Sleeves

- Designed for 6000, 6200 and 6500 top seal elbows
- Consists of aluminum tube (1) and seal (2) which fits inside bottom assembly of elbow
- Allows fuel to bypass and exit below the underground tank collar/elbow seal interface, preventing leakage or spill should problems with sealing or lock-up occur
- 6200-17 for standard height 6000/6200 series elbows
- 6200X-17 for tall 6200 series elbows
- Anti-spill tube can be purchased already assembled within elbows

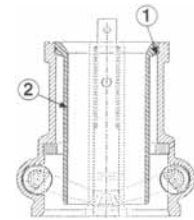

Part #	Description
6200-17	Anti-spill tube for standard height 6000/6200/6500 series elbows
6200X-17	Anti-spill tube for tall height 6200/6500 series elbows

Sketch of 6200-17 sleeve includes:

1. O-ring
2. Aluminum sleeve


Note: Sleeve allows liquid to bypass main gasket/underground tank adapter interface.

Elbow Extension Kits

- Spacer kits raise Bayco brand elbow clearance by 3" for customers requiring additional height to clear deep fill boxes (for 6000/6200/6400/6500/VR6000/VR6200 standard height elbows)
- Requires assembly to elbow
- Kit comes with cast aluminum spacer, linking extension hardware and installation instructions

Note: 6400 extension kit includes replacement vapor tube, not shown in photo.

Part #	Description
6000EXT	for 6000/6200/6400/6500/VR6000/VR6200 elbows
6400EXT	for 6400 co-axial elbow

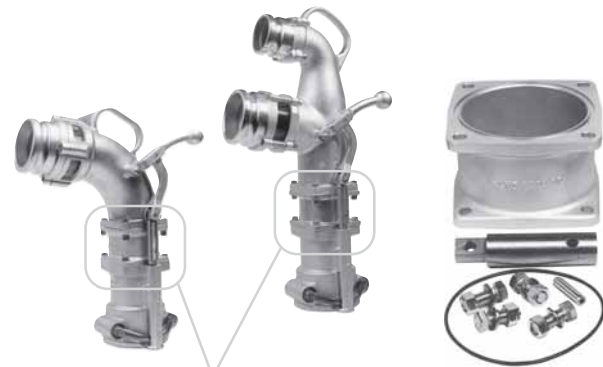

Spacer kits shown assembled to elbows

Anti-Spill Safety Latch Kit

(Requires assembly to elbows)

- Prevents accidental spills by locking 6200/VR6200 series elbows or 6400 series co-axials to underground tank collar
- Available as retro fit kit or assembled on elbows (pictured)
- Kit includes bronze safety latch, hardware and assembly instructions
- Simple, reliable locking and quick release unlocking



Safety Latch

Part #
6200SLK