


Accessory Selection Guide – Firesleeve (cont.)



FSC Clamp

Used to attach firesleeve around socket on hose sizes with a 2" maximum O.D.

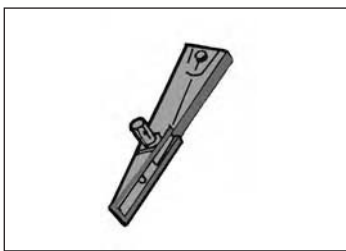


FST Clamp Tool

Part Number: FST-711617 Used to secure FSC clamp.




FSS Firesleeve Sealant


Keeps end of firesleeve from fraying - for neater, longer lasting installation.

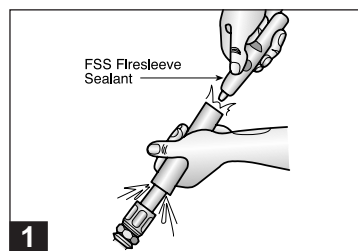

1

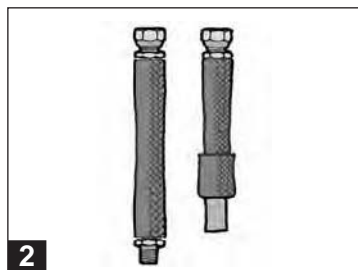

2

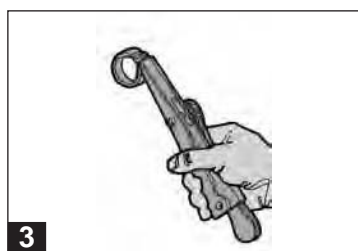

3



4

Firesleeve Assembly Instructions

1. Assemble one end fitting on hose. Cut firesleeve to same length as hose. Cover approximately 1" of each end of firesleeve with FSS sealant and allow to dry.
2. Push firesleeve back from cut end of hose and assemble the second end fitting. Then pull firesleeve completely over both sockets.
3. Insert tail of FSC clamp into FST clamping tool.
4. Position clamp around middle of socket and tighten with tool. Bend end of band back over buckle. Repeat on other end. Repair any scuffs or abrasions in firesleeve with FSS sealant.

Hose
A

Fittings
B

Equipment
C

Accessories
D

Technical
E